

## Profiler II Operation Chart

| Conditions     |                 |           |             |       |        | Results   |
|----------------|-----------------|-----------|-------------|-------|--------|---|
| Vehicle Parked | Vehicle in Gear | Lift Open | Lift Closed | TV ON | TV OFF |   |
| X              |                 | X         |             | X     |        | Lift will lock not allowing manual control while TV is on. When manual button is pressed lift will just beep.   |
| X              |                 | X         |             |       | X      | Lift will close normally when manual control button is pressed.   |
| X              |                 |           | X           | X     |        | Lift will beep 10 times then open and lock disabling manual control button while TV is on. When manual button is pressed lift will just beep.   |
| X              |                 |           | X           |       | X      | Lift will open normally when manual control button is pressed.  |
|                | X               | X         |             | X     |        | Lift will beep 10 times and close. Then beep 10 times and crack open to vent TV. Lift will then rapidly beep 20 times, then pause for 20 seconds and repeat this cycle while TV is on and vehicle is in gear. Manual control is disabled. |
|                | X               | X         |             |       | X      | Lift will beep 10 times then close and lock, disabling the manual control button.   |
|                | X               |           | X           | X     |        | Lift will beep 10 times then crack open to vent TV. Lift will then beep rapidly 20 times, then pause 20 seconds and repeat this cycle while TV is on. Manual control is disabled  |
|                | X               |           | X           |       | X      | Lift locks and will not allow manual control while vehicle is in gear.  |